

The purpose of this Quick Reference Guide is to familiarise the driver with the layout of the vehicle controls.

Vehicle Security

See Security System Handbook.

Sound System

See Sound System Handbook.

Climate Control

See Driver's Handbook, Section 5.

Underbonnet Servicing

See Vehicle Care Handbook, Section 3.

Wheel Changing and Jacking

See Vehicle Care Handbook, Section 4.

WORKING COPY

**NOT TO BE REMOVED
FROM THE DEPARTMENT**





JAGUAR XK8

QUICK GUIDE






◀ Key-ring Transmitter

-  Lock.
-  Un-lock.
-  Headlamp convenience.
-  Luggage compartment release.


See Security System Handbook

Ignition/Starter ▶ Switch

See page 56.

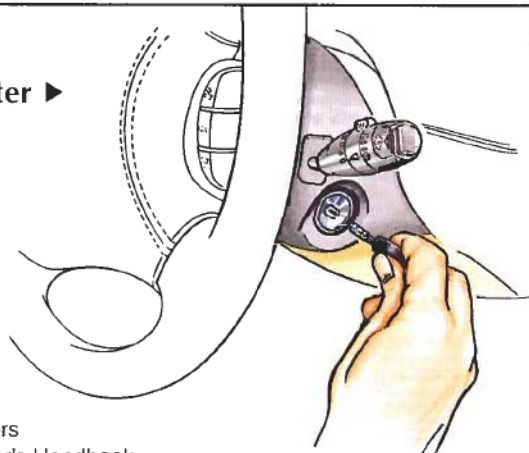


Page numbers refer to Driver's Handbook

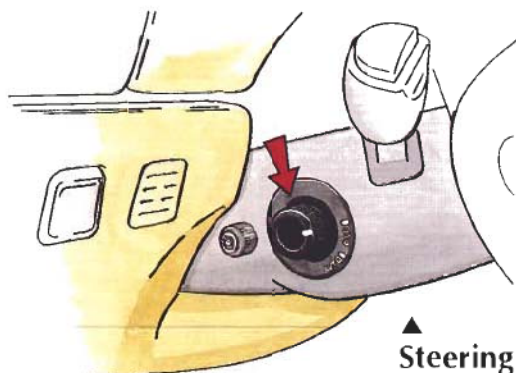


▲ Steering Column Adjustment

See page 50 and 51.

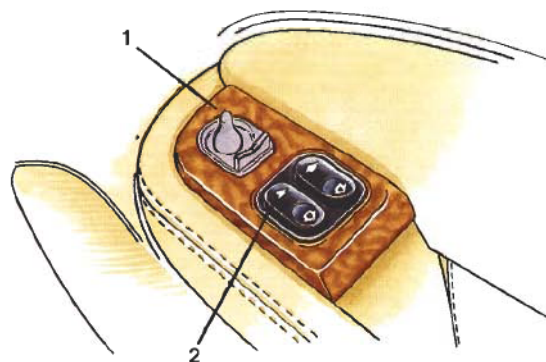


▲ Door Switch Pack

- 1 Door mirror adjustment switch. See page 52.
- 2 Window operation switches. See page 32.

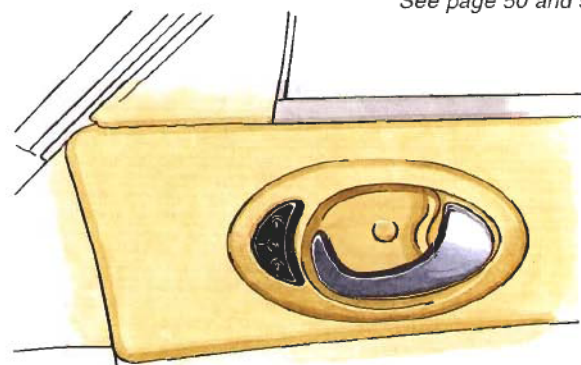

▲ Driving Position Memory Buttons

See page 49.

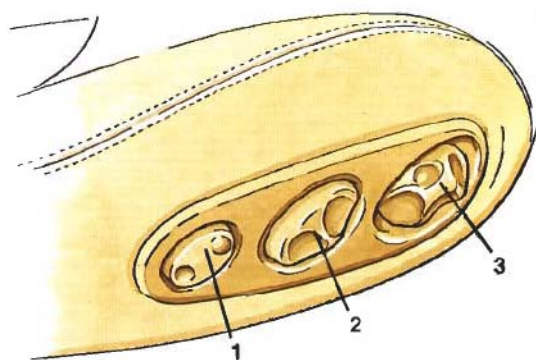

▲ Seat Adjustment Switches See page 47.

- 1 Lumber support.
- 2 Seat back.
- 3 Seat cushion.




◀ Front Seat Belt Height Adjustment

See page 64.

Front Seat ▶ Back Tilt

See page 48.

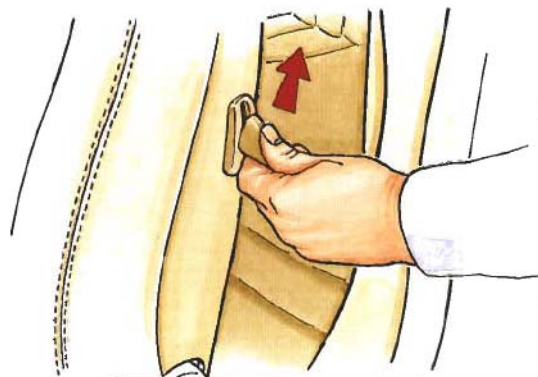


Tyre Pressures

See inside front cover of the Driver's Handbook and also the tyre recommendation label in the centre console storage compartment.




Fuel Filler ▶

See page 58.

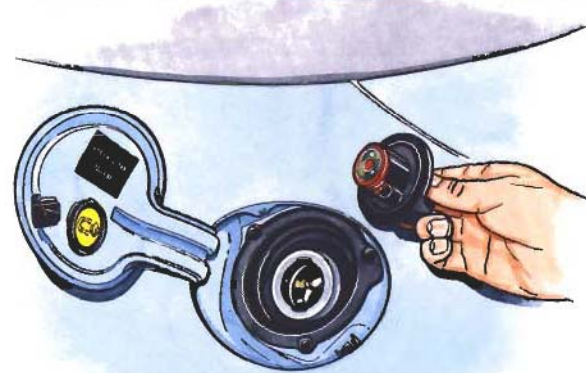

◀ Bonnet Release

See Vehicle Care Handbook page 10.

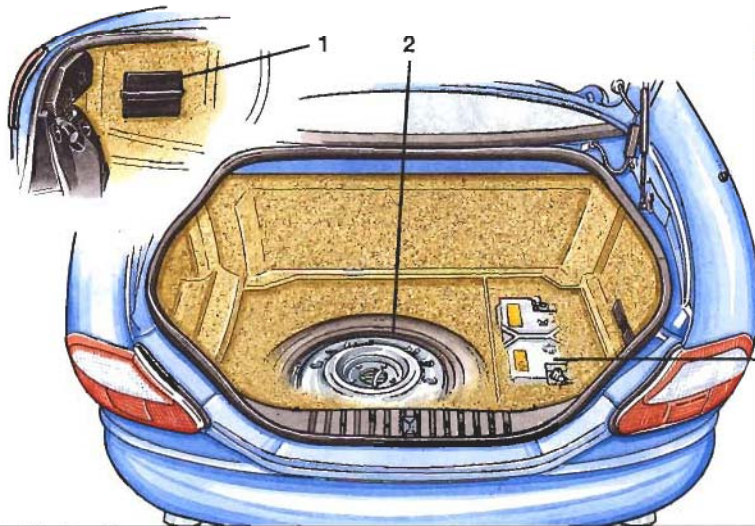


◀ Fuses

See Vehicle Care Handbook page 42.

Bulb Changing ▶

See Vehicle Care Handbook page 63.

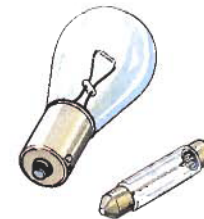


◀ Luggage Compartment Layout


- 1 Literature pack which includes Security and Vehicle Care Handbooks.
- 2 Spare wheel and wheel changing equipment. See Vehicle Care Handbook page 30.
- 3 Battery. See Vehicle Care Handbook page 60.

Instruments and Controls


- 1 Map light switch. *See page 38.*
- 2 Interior rear view mirror. *See page 54.*

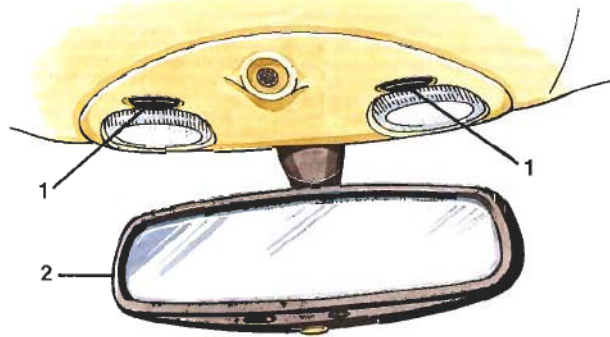

- 3 Drivers airbag and horns. *See page 62 and 41.*
- 4 Sound system controls. *See Sound System Handbook.*
- 5 Exterior lighting, direction indicator and trip cycle switches. *See page 35, 35 and 23.*
- 6 Trip computer switches. *See page 24.*
- 7 Instrument pack and warning lights. *See page 12.*
- 8 Message centre display. *See page 19.*
- 9 Windscreen wipers and washers, Headlamp powerwash switches. *See page 40 and 41.*

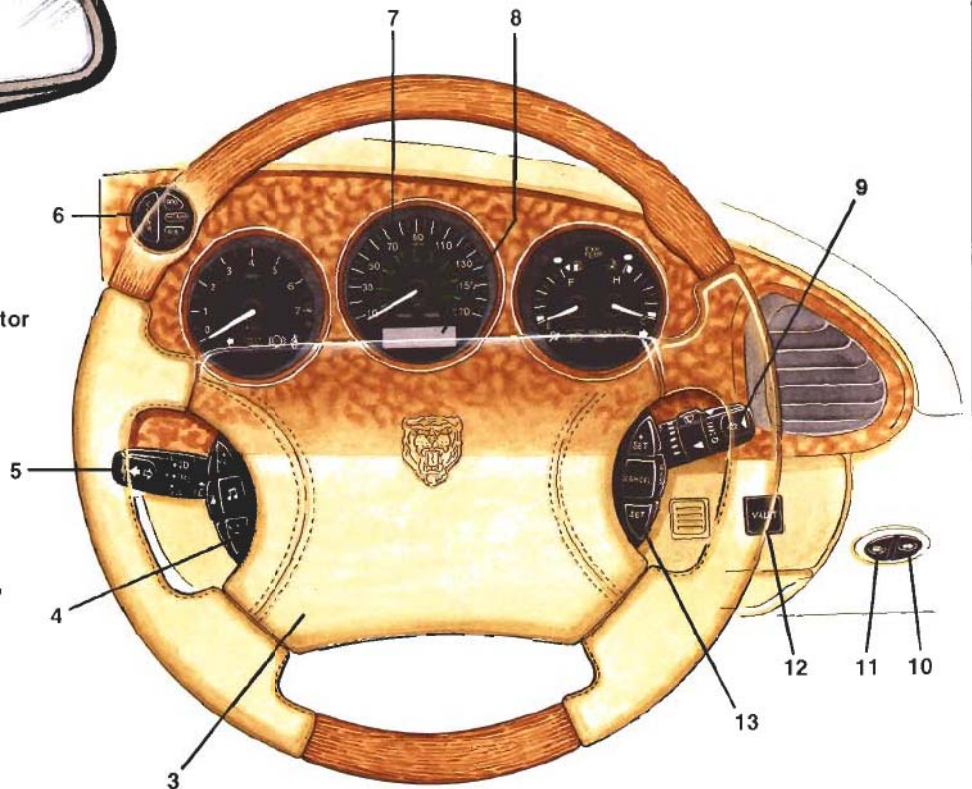

- 10 Fuel flap release switch. *See page 58.*
- 11 Luggage compartment remote release switch. *See page 46.*
- 12 Valet switch. *See page 46.*
- 13 Cruise control switches. *See page 29.*
- 14 Climate control system control panel. *See page 78.*
- 15 Hazard warning switch. *See page 37.*
- 16 Front seat heater switch. *See page 48.*
- 17 Automatic stability or traction control switch. *See page 31.*
- 18 Sport mode switch. *See page 27.*
- 19 Cruise control master switch. *See page 29.*
- 20 Roof and rear quarter window switch (convertible only). *See page 90 and 34.*
- 21 Radio, cassette, CD and telephone control panel. *See Sound System Handbook.*
- 22 Rear fog lamps switch. *See page 37.*
- 23 Front fog lamps switch. *See page 37.*
- 24 Headlamp levelling switch. *See page 37.*
- 25 Heated front screen switch. *See page 80.*
- 26 Heated rear screen switch. *See page 80.*

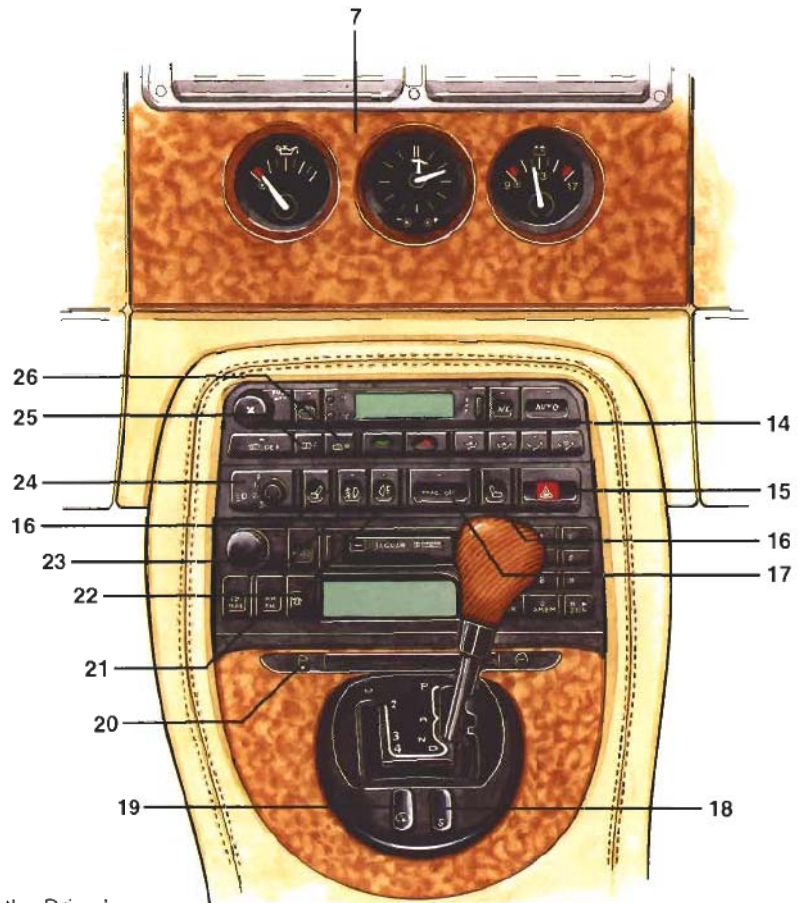

Page numbers refer to Driver's Handbook.

For more in-depth information the driver should study the Driver's Handbook, with particular reference to all **WARNINGS** and **Cautions**.